

04/2022

Mod: WOKI-35/DH

Production code: ADV1763-A

POSABLE INDUCTION / FREE STANDING INDUCTION



GAMME DIAMOND

WOKI-35/DH

FREE STANDING INDUCTION

WOKI-35/DH

TECHNICAL FEATURES

AFTER SALES SERVICE DATA

Operating Instructions : FX00282-D
Servicing guide : ---

DESCOVERALL DESCRIPTION

Manufacturing date : 05/2016
Type : Electronique
Material type : Stainless steel + EZ

CHARACTERISTICS

Power supply : 230V ± 10%, 50 Hz ou 60 Hz
Current density : 16A
Maximum power returned (CEI) : 82 - 90%
Weight bare : 10,5 Kg
Weight with touch panel control :
Weight with knobs panel control :
Inductor : double coil 280 mm
Consumption in stand-by-state : 2.5W

DIMENSIONS

	Packaging	Product	Embedding
Height	375 mm	160 mm	-
Width	495 mm	390 mm	-
Depth	620 mm	430 mm	-

SECURITIES

F3: Sensor T ° vitro under vitreous ceramic in short circuit (CTN)

F4: Sensor T ° vitro under vitreous ceramic in open circuit (CTN)

F5: Electronic Sensor in short circuit (CTN)

F6: Electronic Sensor in open circuit (CTN)

F7: Electronic Overheating

F8: Defect Fan

- Defect hardware on generator board.
- Insufficient Variation of the temperature under vitreous ceramic.

F9: Problem of tension or low frequency

F-: Problem touches detected permanently

BIP: Power surge or too high frequency

To acquire the defect F8, disconnect and reconnect the grip of the device.

WARNING !

PEOPLE EQUIPED WITH PACEMARKERS OR ACTIVE IM-PLANTS.

The hob complies with electromagnetic standards. This induction hob therefore fully meets legal requirements (directives 89 / 336 / CEE). It has been designed so that it does not interfere with working or other electric appliances provided that they respect the same regulations.

This induction hob generates electromagnetic fields in its very close environment.

VOLTAGE WARNING!

This is an electronic product. Some parts of the product are under electric, and the other parts have to be connected with the ground.

Do not remove the top case when the power cord is connected to the wall plug.

Do not switch on when the top case is removed.
When dismantling the product, it is absolutely necessary to test it before plugging it.

TEST OF GROUND (< 0,1 Ohm)
TEST OF HIGH TENSION (1250 V / 30 sec)

BE CAREFUL !

When cleaning the filter, please disconnect the device. Replace it before use by means of a screw TORX.

FREE STANDING INDUCTION WOKI-35/DH	TECHNICAL FEATURES
---	-------------------------------

affichage Erreur clavier	Extention Code Erreur	Causes potentielles	Intervention
F3		In vitro sensor in short circuit	SAV
F4		In vitro sensor cut off or absent	SAV
F5		IGBT sensor shorted	SAV
F5		Sensor temperature generator card cut or missing	SAV
F6		IGBT temperature sensor switched off or missing	SAV
F6		Sensor temperature generator in short circuit	SAV
F7		Temperature on IGBT too high	Press on / off key to
F8	00	The temperature of the in vitro sensor does not vary	
	13	One or more fans missing or defective	
	14	One or more fans missing or defective	
	15	Measuring fault of the inductive current	
	16	Failure to measure the phase of the inductive current	
	18	Internal 13.8-volt generator voltage fault	
	19	Slave generator communication fault	
	19	Analogue safety fault	
F9	09	Mains voltage below 85 Vac	press on / off key to acknowledge fault, or disconnect / reconnect product. If error code still present: Call After sales
	20	Mains frequency below 285 Hz	
	10	Line voltage greater than 285 Vac	
	19	Mains frequency greater than 70 Hz	

REE STANDING INDUCTION

WOKI-35/DH

**TECHNICAL
FEATURES**

NO CONSIDERATION OF THE CONTRACTUAL GUARANTEE MANUFACTURER:

- Vitro glass breakage or cracking (with flat or wok unit)
- Breakage of the adjustment knob after a bad using.
- Failure after an intervention on the power cord (replacing of the plug, cut of the cord, plucking of the cord or degradation of the cord)
- Consequential failure resulting in improper electrical connection on the main line (ex: 400V instead of 230V)
- Failure following product disassembly and/or after an intervention inside the unit
- Failure due to lack of product maintenance (air filter not clean or clogged)
- Failure following the absence of the air filter or due to the presence of water, foreign body or fluids inside the unit (on the electronic boards or ..)

HOW TO DISCONNECT THE CONNECTIONS INSIDE PRODUCT:

1 - Be sure that the unit is disconnected of the main line


2 - Open the vitroceram top casing

3 - Disconnect the keyboard with precaution. It is necessary to hold the connector of the flat cable with 2 fingers. You should not remove directly the flat cable.


4 - During the reassembly, It is necessary to be sure of the good connection of the keyboard and also of the good connection of the power cord sockets.

FREE STANDING INDUCTION

WOKI-35/DH

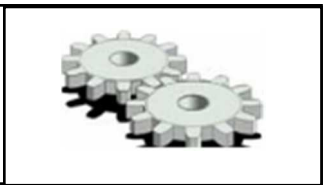

INTERCONNEXION / INTERCONNECTION:

Vis secteur et vis inducteur:
Couple de serrage 1.5 N.m
 Sector screw and inductor screw
Couple of tightening of screws 1.5 N.m

