
Exploded diagram and spare parts list (HT762)

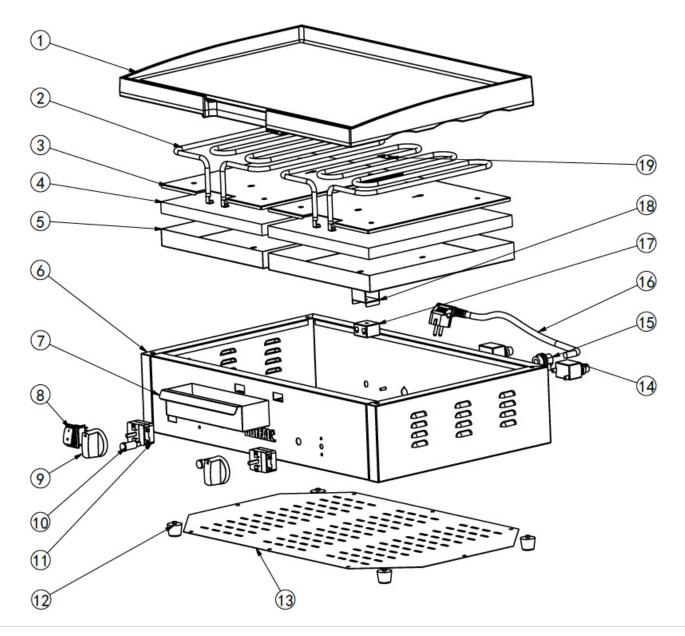

Machine	Explode	Code	Description
HT762 - Buffalo Extra Wide Cast Iron Griddle	1	<u> </u>	Cast Iron Griddle Plate
HT762 - Buffalo Extra Wide Cast Iron Griddle	2	AS812	Heating Element
HT762 - Buffalo Extra Wide Cast Iron Griddle	3	~	Heating Element Pressure Plate
HT762 - Buffalo Extra Wide Cast Iron Griddle	4	*	Thermal Insulation Cotton
HT762 - Buffalo Extra Wide Cast Iron Griddle	5	*	Heat Pipe Cover Plate
HT762 - Buffalo Extra Wide Cast Iron Griddle	6	~	Housing
HT762 - Buffalo Extra Wide Cast Iron Griddle	7	AS813	Oil Tray
HT762 - Buffalo Extra Wide Cast Iron Griddle	8	AS020	On/Off Switch
HT762 - Buffalo Extra Wide Cast Iron Griddle	9	AS009	Knob
HT762 - Buffalo Extra Wide Cast Iron Griddle	9	AS011	Knob Core
HT762 - Buffalo Extra Wide Cast Iron Griddle	10	AS007	Green Indicator Light
HT762 - Buffalo Extra Wide Cast Iron Griddle	11	AS814	Temperature Controller
HT762 - Buffalo Extra Wide Cast Iron Griddle	12	AK017	Rubber Feet (set 4)
HT762 - Buffalo Extra Wide Cast Iron Griddle	13	~	Bottom Plate
HT762 - Buffalo Extra Wide Cast Iron Griddle	14	AS815	Temperature Cut Out
HT762 - Buffalo Extra Wide Cast Iron Griddle	15	AL187	Power Cable Head
HT762 - Buffalo Extra Wide Cast Iron Griddle	16	AS428	Power Cord
HT762 - Buffalo Extra Wide Cast Iron Griddle	17	AK025	Ceramic Terminal Block
HT762 - Buffalo Extra Wide Cast Iron Griddle	18	~	Terminal Bracket
HT762 - Buffalo Extra Wide Cast Iron Griddle	19	AS816	Sensor Fixed Clip