PROPRIETARY RIGHTS NOTICE This document and all information contained within it is the property of Hamilton Beach Brands, Inc. (HBB). It is confidential and proprietary and has been provided to you for a limited purpose. It must be returned or destroyed upon request. Disclosure, reproduction or use of this document and any information contained within it, in full or in part, for any purpose is forbidden without the prior written consent of HBB. No photographs may be taken of any article fabricated or assembled from this document without the prior written consent of HBB.

Trouble Shooting Guide

Symptom: No response when the start switch is activated and the LED flashes 3-4 times after each attempt. **Cause:** Jar is not installed on the base. Lid is not fully seated on the jar. Lid is not in the correct orientation on the jar. Interlock components in the jar are faulty.

Container Bypass Feature (used as a check) – With main power switch in off position, engage both paddle switches in the momentary position (start and pulse). While holding the paddle switches, turn on the main power switch. This will allow the blender to function on high speed. Once either of both paddle switches are released, the motor will turn off. This feature is to troubleshoot the interlock jar, but will not rule out interlock components in the base.

Symptom: During a normal cycle the machine stopped and the LED is FLASHING.

Cause: Lid not seated fully on the jar. There was an imbalance in the jar causing the connection between the jar and base to be interrupted. The unit possibly overheated. Check the electrical circuit to verify that power is getting to the machine. If so, unplug the unit for 20-30 minutes. Plug in the unit and try to operate. If the problem persists proceed to the repair guide.

Symptom: No response when the start switch is activate and the LED is NOT FLASHING.

Cause: Ensure the power outlet is operational. Ensure that the circuit breaker on the back of the machine is in the ON position. Possible defective switch. Possible faulty PCBA or dead motor.

Symptom: Start/On/Stop switch or High/Low/ Pulse switch binding. **Cause:** Ensure switch is free of debris. Gently clean around edges.

Symptom: Unit is extremely noisy.

Cause: Possible worn bearing on cutter assembly. Remove container from blender. Slowly turn the cutter assembly from the bottom of the container. If it is hard to turn or feels loose/wobbly replace cutter assembly. Possible worn drive coupling. Check the teeth of the drive coupling. If worn, replace drive coupling outlined in repair guide.

Symptom: Blends poorly

Cause: Incorrect mixture of ingredients. If cavitating, add more liquids. Possible worn bearing on cutter assembly. Possible worn drive coupling.

Hamilton Beach 4421 Waterfront Drive Glen Allen, VA 23060	Revision Description:	Production Rel	ease.				Rev. Date	
	Request #:	DOC11225	Page:	1 of 7	Document #:	520009900	Rev:	Α

PROPRIETARY RIGHTS NOTICE This document and all information contained within it is the property of Hamilton Beach Brands, Inc. (HBB). It is confidential and proprietary and has been provided to you for a limited purpose. It must be returned or destroyed upon request. Disclosure, reproduction or use of this document and any information contained within it, in full or in part, for any purpose is forbidden without the prior written consent of HBB. No photographs may be taken of any article fabricated or assembled from this document without the prior written consent of HBB.

Repair Guide

Drive Clutch Removal/Replacement

- Turn power switch to the "OFF" position and unplug the machine.
- Remove the motor access cover on the bottom side of the unit.
- Use 10mm socket or nut driver to hold the motor shaft while you rotate the drive clutch.

Housing Disassembly

- Turn power switch to the "OFF" position and unplug the machine.
- Remove the drive clutch as described above.
- Remove the jar pad.
- Remove the four screws under jar pad feet.
- Carefully Split the upper and lower housings; wires will limit your movement.




Hamilton Beach 4421 Waterfront Drive Glen Allen, VA 23060	Revision Description:	Production Rel	ease.				Rev. Date	
	Request #:	DOC11225	Page:	2 of 7	Document #:	520009900	Rev:	Α

PROPRIETARY RIGHTS NOTICE This document and all information contained within it is the property of Hamilton Beach Brands, Inc. (HBB). It is confidential and proprietary and has been provided to you for a limited purpose. It must be returned or destroyed upon request. Disclosure, reproduction or use of this document and any information contained within it, in full or in part, for any purpose is forbidden without the prior written consent of HBB. No photographs may be taken of any article fabricated or assembled from this document without the prior written consent of HBB.

Motor Removal/Replacement

- Remove the 4 feet from the bottom of the unit.
- Remove the 4 screws under the feet.
- Remove the 4 screws securing the rear panel.
- Carefully pull the rear panel loose from the lower housing and disconnecting the power cord 3-pin connector.
- Disassemble housings as described in Housing Disassembly above.
- Remove lower housing from the assembly.

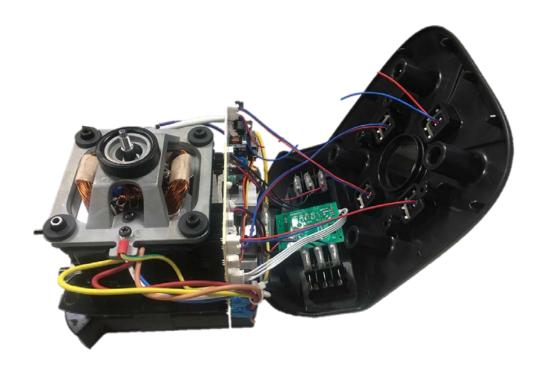

- Remove the screw securing the green and yellow ground wire to the motor bracket.
- Disconnect the (5) motor leads from the control board.
- Disconnect Hall Effect sensor connector.
- Lift the motor from the motor shroud.
- Assemble in reverse order.

Hamilton Beach 4421 Waterfront Drive Glen Allen, VA 23060	Revision Description:	Production Rel	Production Release.					
	Request #:	DOC11225	Page:	3 of 7	Document #:	520009900	Rev:	Α

PROPRIETARY RIGHTS NOTICE This document and all information contained within it is the property of Hamilton Beach Brands, Inc. (HBB). It is confidential and proprietary and has been provided to you for a limited purpose. It must be returned or destroyed upon request. Disclosure, reproduction or use of this document and any information contained within it, in full or in part, for any purpose is forbidden without the prior written consent of HBB. No photographs may be taken of any article fabricated or assembled from this document without the prior written consent of HBB.

Circuit Board Removal

- Disassemble housings as described in Housing Disassembly above.
- Remove the 4 feet from the bottom of the unit.
- Remove the 4 screws under the feet.
- Remove the 4 screws securing the rear panel.
- Carefully pull the rear panel loose from the lower housing and disconnecting the power cord 3-pin connector.
- Remove lower housing from the assembly.
- Remove the 4 screws that secure the circuit board to the motor shroud.
- Disconnect wires from circuit board. Mark wire location if necessary.
- Reassemble in reverse order.

Switch w/ Cordset Assembly Removal/Replacement

- Remove 4 screws on the rear panel.
- Disconnect the power cord 3-pin connector.
- Reassemble in reverse order

Paddle Switches

- Disassemble housings as described in Housing Disassembly above.
- Disconnect the wires at the switch.
- Depress the 4 locking tabs that secure the switch to the upper housing and remove.
- Reassemble in reverse order.

Timer Switch

- Remove knob by firmly pulling it away from the upper housing.
- Disconnect timer wire from circuit board.
- Remove the nut securing the switch to the upper housing and remove switch.
- The switch is aligned in the housing with a tab and a notch.
- Reassemble in reverse order.

Hamilton Beach 4421 Waterfront Drive Glen Allen, VA 23060	Revision Description:	Production Rel	Rev. Date: 23-Jul-2020					
Gleff Allell, VA 25000	Request #:	DOC11225	Page:	4 of 7	Document #:	520009900	Rev:	Α

PROPRIETARY RIGHTS NOTICE This document and all information contained within it is the property of Hamilton Beach Brands, Inc. (HBB). It is confidential and proprietary and has been provided to you for a limited purpose. It must be returned or destroyed upon request. Disclosure, reproduction or use of this document and any information contained within it, in full or in part, for any purpose is forbidden without the prior written consent of HBB. No photographs may be taken of any article fabricated or assembled from this document without the prior written consent of HBB.




Circuit Board

- The white motor lead to terminal W1
- The red motor lead to terminal W2
- The yellow motor lead to terminal W3
- The brown motor lead to terminal W4
- The blue motor lead to terminal W5
- The green and yellow to terminal PE
- The brown power lead to terminal ACL
- The blue power lead to terminal ACN
- The variable speed dial lead connects to terminal CONA
- Jar interlock sensors installed in upper housing (image below)

Hamilton Beach 4421 Waterfront Drive Glen Allen, VA 23060	Revision Description:	Production Rel	ease.		Production Release.					
Gleff Allell, VA 23000	Request #:	DOC11225	Page:	5 of 7	Document #:	520009900	Rev:	Α		


PROPRIETARY RIGHTS NOTICE This document and all information contained within it is the property of Hamilton Beach Brands, Inc. (HBB). It is confidential and proprietary and has been provided to you for a limited purpose. It must be returned or destroyed upon request. Disclosure, reproduction or use of this document and any information contained within it, in full or in part, for any purpose is forbidden without the prior written consent of HBB. No photographs may be taken of any article fabricated or assembled from this document without the prior written consent of HBB.

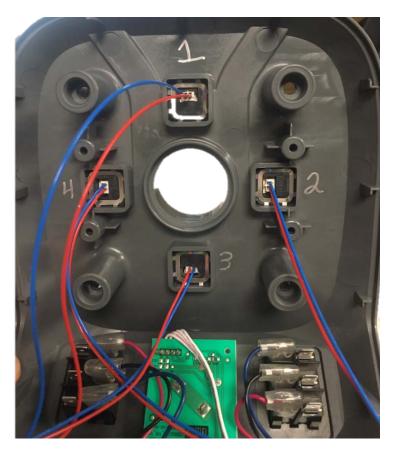

- Lead 1 to RX1
- Lead 2 to TX2
- Lead 3 to RX2
- Lead 4 to TX1
- Hall Effect lead to terminal CN11

Hamilton Beach 4421 Waterfront Drive Glen Allen, VA 23060	Revision Description:	Production Rel	ease.				Rev. Date	
	Request #:	DOC11225	Page:	6 of 7	Document #:	520009900	Rev:	Α

PROPRIETARY RIGHTS NOTICE This document and all information contained within it is the property of Hamilton Beach Brands, Inc. (HBB). It is confidential and proprietary and has been provided to you for a limited purpose. It must be returned or destroyed upon request. Disclosure, reproduction or use of this document and any information contained within it, in full or in part, for any purpose is forbidden without the prior written consent of HBB. No photographs may be taken of any article fabricated or assembled from this document without the prior written consent of HBB.

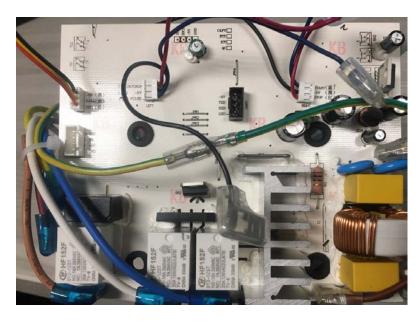

Power Cord

- Green cord lead connects to the motor ground.
- White cord lead connects to the lamp side of the circuit breaker switch.
- Black cord lead connects to the open/closed side of the circuit breaker switch.



Hamilton Beach 4421 Waterfront Drive Glen Allen, VA 23060	Revision Description:	Production Rel	ease.				Rev. Date	
·	Request #:	DOC11225	Page:	7 of 7	Document #:	520009900	Rev:	Α